



## Simplified Instructions for FCT10 /FCT10b

### IMPORTANT!

During the programming of the unit, you will need to specify an 8 digit administrative IB code.

Please write down your chosen 8-digit number below before commencing programming. During the programming of the unit, you also need to specify a PIN number of between 4 & 6 digits.

Please write down your chosen PIN number below before commencing programming. For each PIN number you need to specify a channel number (i.e. 0, 1, 2, 3, 4, 5, 6, 7, 8, 9).

Please write down your chosen PIN number below before commencing programming.

**IB Code**.....

**PIN Number** .....

**Channel No**.....

1. Attach battery (key pad will beep every 4 seconds)
2. Enter the factory set IB code '**1 2 3 4 5 6 7 8**'
3. Press '**Key**' switch (key pad will give a long beep)
4. Press '**Bell**' switch (key pad will give a long beep followed by several short beeps)
5. Press '**Key**' switch
6. Enter the factory set IB code '**1 2 3 4 5 6 7 8**'
7. Press '**Key**' switch (key pad will give a long beep)
8. Enter your chosen **New** IB code
9. Press '**Key**' switch (key pad will give a long beep)
10. Re-enter your chosen **New** IB code
11. Press '**Key**' switch (key pad will give a long beep)



12. Press '**Bell**' switch (key pad will give a long beep followed by several short beeps)
13. Press '**Key**' switch
14. Re-enter your chosen **New** IB code
15. Press '**Key**' switch (key pad will give a long beep)
16. Press your chosen channel number (i.e. 0, 1, 2, 3, 4, 5, 6, 7, 8, 9)
17. Press '**Key**' switch
18. Enter your chosen PIN number
19. Press '**Key**' switch (key pad will give a long beep)
20. Press '**Bell**' switch (key pad will give a long beep followed by several short beeps)
21. Place hand transmitter side by side with keypad
22. Enter your chosen PIN number
23. Press button on hand transmitter & keep pressed
24. Press & hold **Key** switch (key pad will give several short beeps followed by 1 long beep)
25. Release both buttons

---

## Changing the PIN Number

1. Press '**Key**' switch
2. Enter your 8 digit IB code
3. Press '**Key**' switch
4. Press the channel number the existing PIN number is associated with



5. Press '**Key**' switch
6. Enter your **New** PIN number
7. Press '**Key**' switch